

ORIENT SMARTBOARD

Orienting the board means that you are syncing the board with the projector's display so when you touch the board with a pen or your finger, it responds to where it is being touched

THERE ARE A FEW WAYS TO DO THIS!


1.



open the Smartboard software icon on your computer that is labeled Notebook Software 11

When the software opens, you will be presented with a welcome screen. You can select the Orient option from here.

However, there is another option in the next step

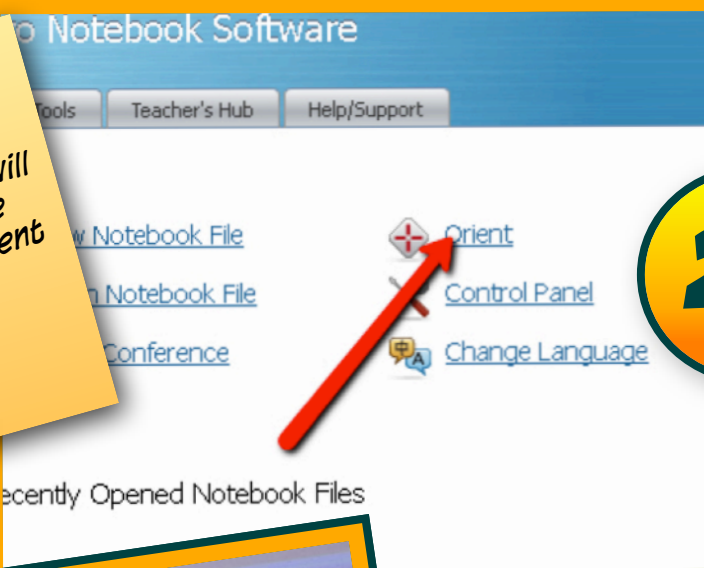


2.

3.



Located on the pen tray of the board are two buttons


4

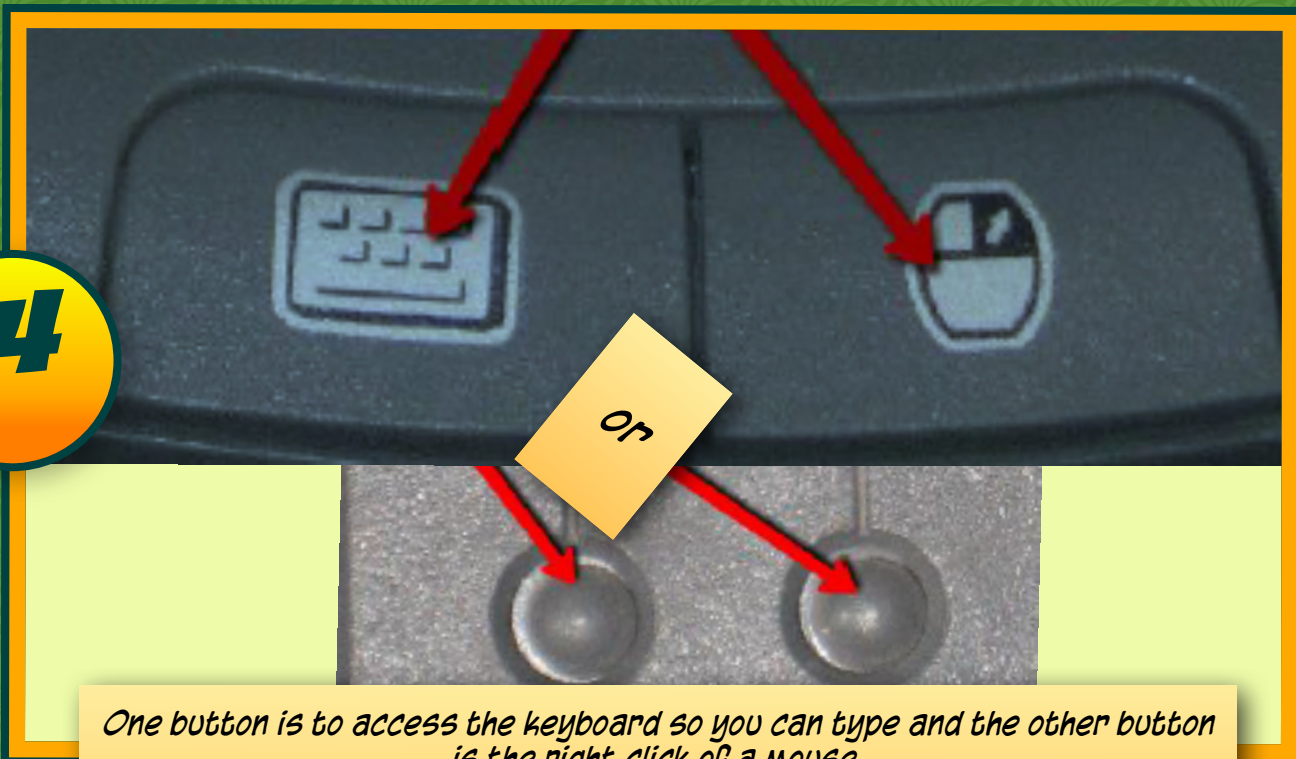

One button is to access the keyboard so you can type and the other button is the right click of a mouse.

If you press these two buttons down at the exact same time, you will have the option to orient the board

5

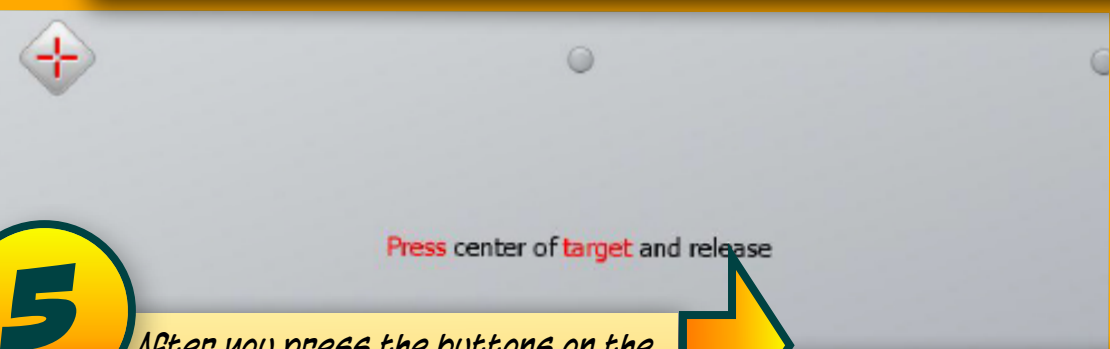


After you press the buttons on the pen tray or select the orient option from the welcome screen, the orientation screen will appear

To orient the board with the most accuracy, use a pen from the pen tray instead of one of your fingers

select the middle space in between the crosshairs at the nine targets that appear on the board.

After you have selected each target, the orientation screen will disappear and the board will be accurate.

6

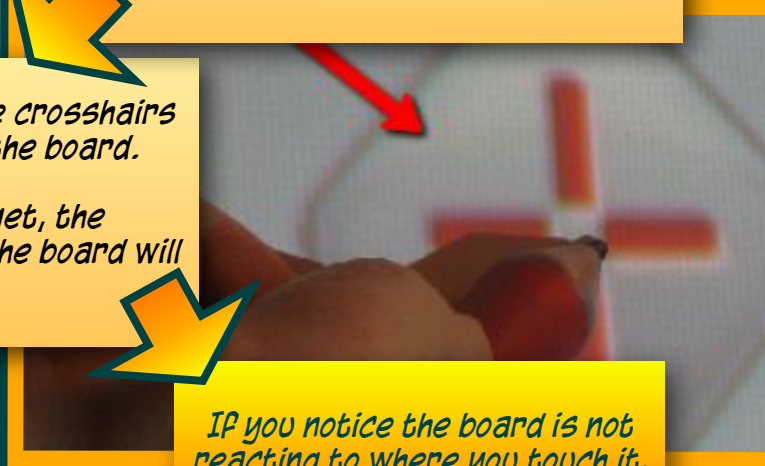

If you notice the board is not reacting to where you touch it, you must re-orient the board

ORIENTING THE SMARTBOARD